

GENERAL SAFETY RULES

WARNING: Failure to read all instructions may result in serious personal injury.

- **Avoid dangerous environments.** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **Store the inverter in a safe space when not in use.** Keep out of reach of children.
- **Use the inverter for its intended purpose ONLY.** Do not overload the inverter. Trying to power an appliance that draws wattage larger than inverter's capability will result in damage to the inverter.
- **Use right appliance.** Do not use the appliance for any job except that for which it is intended.
- **Proper cooling is essential when operating the inverter.** Do not place the unit near the vehicle's heat vent or in direct sunlight.
- **Use of accessories and attachments.** Do not use any accessories or attachments that are not recommended to use with your appliance. This could result in damage to the unit.

WARNING: Keep away from WATER, FIRE, and SMOKE!

The inverter will shut off if overheated, overloaded, or short-circuited.

IMPORTANT SAFETY INFORMATION

For safe and optimum performance, the inverter must be installed and used properly. Follow these guidelines and pay special attention to caution and warning statements.

WARNING: Shock hazard! Keep away from children.

WARNING: The inverter produces the same potentially lethal 110V/AC power as normal household outlets. It is suggested that you treat it as a normal 110V/AC outlet.

WARNING: The exterior of the unit may become very warm under high power operation, reaching 140°F. Be sure that there is at least 2 inches of unobstructed air space around the perimeter of the inverter at all times. During use, do not place materials that could be damaged by heat near the unit.

WARNING: Do not operate the unit near flammable fumes or gases such as the cabin of a gasoline power boat or near propane tanks.

WARNING: Do not operate the unit in an enclosed area that contains lead-acid batteries for automotive use. This type of battery emits explosive hydrogen gas which can be ignited by sparks.

WARNING: Always make all AC connections before making DC connections or the components built into the inverter can become energized, producing an electrical shock hazard. Never work on the AC wiring without first physically disconnecting the DC connections.

CAUTION: Do not connect the unit to live AC power circuits or there will be damage to the inverter. Do not connect any AC device, which has its neutral conductor connected to the ground, to the unit.

CAUTION: Do not use the unit on the following items:

- Small battery-operated appliances such as flashlights, razors, and nightlights that can be plugged directly into an AC outlet to recharge.
- Certain battery chargers for hand tool battery packs. These chargers will have warning labels indicating dangerous voltages.

CAUTION: Connect the inverter to a 12V battery. The inverter will work properly with 11V to 15V inputs.

ATTENTION: Maximum wattage available depends on vehicle power port rating.
 Amps x Volts = Watts
 A 10 Amp outlet can supply 120 Watts.
 A 15 Amp outlet can supply 180 Watts.

ADDITIONAL SAFETY GUIDELINES

- Do not put anything on the unit outlets, vents, or fan openings.
- Do not connect the unit to any utility power distribution systems or branch circuits.
- Do not use the inverter in temperatures over 104°F or under 32°F.
- Failure to follow these safety guidelines will result in personal injury and/or damage to the unit. It may also void the warranty.

OPERATING TIPS

The inverter should only be operated in locations that are:

- Dry:** Do not allow water or other liquids to come into contact with the inverter.
- Cool:** Keep the inverter away from direct sunlight, when possible.

- Well-Ventilated:** Keep the area surrounding the inverter clear to ensure free air circulation around the unit. Do not place items on or over the inverter during operation. The unit will shut down if the internal temperature gets too hot. The inverter will auto-restart after it cools down.
- Safe:** Do not use the inverter near flammable materials or in any locations that may accumulate flammable fumes or gases. This is an electrical appliance that can briefly spark when electrical connections are made or broken.

Please find the continuous output power of your inverter below.

CMN120S: Continuous output 120W

HELPFUL FORMULAS:

To convert AMPS to WATTS: **AMPS x VOLTS = WATTS**
 To convert WATTS to AMPS: **WATTS ÷ VOLTS = AMPS**

When you turn on an appliance or a tool that operates using a motor, it requires an initial surge of power to startup. This surge of power is referred to as the "starting load" or "peak load". Once started, the tool or appliance requires less power to continue to operate. This is referred to as the "continuous load" in terms of power requirements.

You will need to determine how much power your tool or appliance requires to startup and its continued running power requirements.

Most often the start up load of the appliance or power tool determines whether your inverter has the capability to power it.

Your inverter should be connected directly to your vehicle's 12V cigarette or power socket. We recommend that the equipment or appliance switch be in the "OFF" position when you plug into the AC receptacle of the inverter.

1. Place the inverter's 12V plug into the vehicle's 12V cigarette or power socket.
2. Plug in the AC product you want to operate.
3. For safety, disconnect the unit from the socket when not in use.

CAUTION: When short circuit occurs, the inverter shuts off automatically to protect the inverter from damage.

OPERATING THE INVERTER

1. Plug the inverter into the cigarette lighter socket in your vehicle.
2. Check the connections.
3. The glowing LED of your inverter should light up.
4. Your inverter can power AC appliances now.
5. Control the backlighting via the red button on the front panel.

CAUTION: Connect AC appliances one at a time.

Through its AC outlet, the inverter is capable of powering most 110V products at their rated power. The inverter will work under voltage from 11V to 15V DC.

CAUTION: Most vehicle batteries are designed to provide a short period of very high current for starting the engine. They are not designed for a constant "deep cycle". Constantly operating the unit from a vehicle battery, until the low voltage shuts off, will affect the life of the battery. If you are going to operate electrical products for long periods of time, you should consider connecting the unit to a separate deep discharge battery.

CAUTION: Although the inverter incorporates protection against over-voltage, it may still be damaged if the input voltage exceeds 16V.

The unit will shut down automatically if the inverter exceeds a safe operating temperature due to insufficient ventilation or a high-temperature environment.

Type	Possible cause	How do you know if the protection is activated?	Solution	Remarks
Over-heating	The PCB temperature is around 230°F.	Fault indicator LED will light up and the inverter will automatically shut off.	Remove all appliances and unplug inverter. Use smaller power consumption appliances.	Please ensure there is ventilation in the surrounding environment.
Input high voltage	Input voltage higher than 15V.		Remove all appliances and unplug inverter. Recharge the battery.	Although the inverter has protection against overload, it may still damage the inverter if the input voltage exceeds 16V.
Input low voltage	Input voltage lower than 10.5V.		Remove all appliances and unplug inverter. Cool down for 15 minutes before turning on again.	
Current overload	If the output power exceeds the rated output power 10 to 15%.			

THE SELF-PROTECTION OF YOUR INVERTER

BATTERY OPERATING TIME

Operating time will vary depending on the charge level of the battery, its capacity, and the power level drawn by the particular AC load. With a typical vehicle battery, an operating time of 4-5 hours or more can be expected.

When using a vehicle battery as a power source, it is strongly recommended to start the vehicle every hour or two to recharge the battery before its capacity drops too low. The inverter can operate while the engine is running, but the normal voltage drop that occurs during starting of the engine may trigger the inverter's low voltage shutdown feature.

Because the power inverter draws less than 0.45A when its on with no AC product connected, it has minimal impact on battery operating times.

INTERFERENCE WITH ELECTRONIC EQUIPMENT

Generally, most AC products operate with the inverter just as they would with household AC power. Below is the information concerning two possible exceptions.

BUZZING IN AUDIO SYSTEMS AND RADIOS

Some stereo systems and AM-FM radios have inadequate internal power supply filtering and "buzz" slightly when powered by the inverter. Generally, the only solution is an audio product with a higher quality filter.

TELEVISION INTERFERENCE

The inverter is shielded to minimize its interference with TV signals. However, weak TV signal interference may be visible in the form of lines scrolling across the screen.

The following should minimize or eliminate the problem:

- Increase the distance between the inverter and the TV, antenna, and cables.
- Adjust the orientation of the inverter, TV, antenna, and cables.
- Maximize TV signal strength by using a better antenna and use shielded antenna cable where possible.

SPECIFICATIONS

Model	CMN120S
Input	11-15V DC
Output	120V AC
Output Frequency	58-62Hz
Output Waveform	Modified Sine Wave (MSW)
Continuous Power	120W
Surge Power	240W for one minute
Efficiency	85% Max
No Load Draw	<0.4A
Low Battery Shutdown	10.5±0.3V DC
USB Output Port	2.4A
USB-C® Output Port	3.0A (18W)
AC Output Sockets	3 Standard North American sockets
Internal Fuse/ Replacement Fuse	1-12A fuse in the cigarette plug (replaceable)
Operating Temperature	32°F-104°F
Power Cable Length	36" with DC socket
Dimensions	10.87" x 2.68" x 1.98"
Net Weight	1.08 lbs.

*Specifications subject to change without notice.



OWNER'S GUIDE CMN120S

TROUBLESHOOTING

Problem	Cause	Solution
No power, no indicator.	Battery is defective.	Replace battery.
	Blown fuse.	Check and replace fuse.
The inverter will automatically shut off.	Loose connections.	Check connections; be sure the ports and plugs come into contact with each other.
	The actual output power is higher than rated power of inverter, overload protection has occurred.	Reduce load to have the actual output lower than rated power of inverter.
	The actual output is less than rated power, but high starting surge has caused overload shutdown.	Use a product with starting surge power within the inverter's capability.
	The voltage input is too low.	Charge the battery.

Problem	Cause	Solution
The inverter will automatically shut off.	Inverter is overheated due to poor ventilation and has shut down.	Disconnect the inverter from battery or DC socket and allow to be cooled for 15 minutes. Please ensure removal of objects covering unit.
Inverter runs small loads but not large loads.	Low voltage battery.	Charge the battery.
Water entered.	Water entered the unit.	Disconnect the inverter and wipe immediately with a dry cloth or permanent damage can occur with liquid ingress.

Problem	Cause	Solution
Measured inverter output is too low.	Standard "average-reading" AC voltmeter used to measure output voltage, resulting in an apparent reading 5V to 15V too low.	Inverter's "modified sine wave" output requires true RMS voltmeter for accurate measurements.
	Battery voltage is too low.	Recharge battery.
Battery run time is less than expected.	AC product power consumption is higher than rated.	Use a larger battery to make up for increased power requirement.
	Battery is old or defective.	Replace battery.
	Battery is not being properly charged.	Some chargers are not able to fully recharge a battery. Make sure you use a powerful charger.

One-Year Limited Warranty
For support, product, and warranty information,
call 717-967-6101 or email cumminsupport@dascinc.com
Cummins design mark and Cummins® are trademarks and registered
trademarks of Cummins Inc. used under license. All other trademarks and
registered trademarks are property of their respective owners.
©2022 DAS Companies, Inc. Distributed by DAS Companies, Inc.
48 Industrial Drive, Elizabethtown, PA 17022

9

10

11

12

13

14